

ProductCatalogue

- Platform lifts



Stepless™
by *Guldmann*

Imagine a world full of obstacles?

A world in which you no longer have control over which buildings, shops, restaurants and trains you can access?



This is what everyday life is like for many people with reduced mobility such as wheelchair users, people with walking frames, pushchairs, etc. Even though great strides have been made in the past few years in terms of accessibility, there is still room for improvement. Improvements which not only ensure proper accessibility but which also contribute to an increased quality of life and greater independence among wheelchair users, for example.

Free movement requires proper access conditions

With our Stepless solutions, we have specialised in accessibility with the intention of creating proper access conditions for people of limited mobility. Our broad product range of ramps, platform lifts, platform elevators, stairlifts, special solutions and solutions for public transport is a great advantage and makes it possible to find the optimum solution for the project in question.

Special solutions

Improving access conditions to older and listed buildings can often present a challenge. Therefore, we offer bespoke customer solutions based on the customer's needs, the surroundings

and applicable building regulations. The aim is to create aesthetic solutions in harmony with their surroundings.

Over 30 years of experience

V. Guldmann AVS boasts more than 30 years' experience in developing assistive technology products for disabled persons, designed to improve people's quality of life. All our products have been safety-tested and have a safe and timeless design.

If you're looking for ramps, our ramp catalogue can be ordered from our sales department or on our website www.stepless.com, where you can also find more information as well as pictures of our products and solutions.

PLATFORM LIFTS	4
LP1 - 565 mm	4
LP5 - 830 mm	4
LP5+ - 830 mm	4
LP7 & LP7+ - 800/1500 mm	6
LP50H - 830 mm	8
LP50 - 830 mm	10
LP8 - 3 m	12
PUBLIC TRANSPORT	14
Portable ramps	15
Fixed ramp for trains	15
Platform lift LP11	15

Stepless platform lifts are intended for lifting people with reduced mobility (e.g. wheelchair users, people with walking difficulties, people with pushchairs and sack trucks) over level differences of up to 3 m. Platform lifts require less space than ramp systems and are therefore ideal in places where ramps would be too steep or too long.



LP1

LP1 is a small platform lift designed for lifting over level differences up to 565 mm. The platform lift is suitable for locations with limited space. It can be supplied with wireless operation.

LP1 specifications

Lifting height, max	565 mm
Lifting capacity	180 kg
Internal dimensions	1167 x 719 mm



LP5

LP5 is designed to fit harmoniously into most living environments. With a lifting capacity of 360 kg and a lifting height of 830 mm, LP5 is the perfect choice for when smaller level differences must be negotiated. It can be supplied with a safety gate for upper levels, a side exit on the left/right side and wireless operation.

LP5 specifications

Lifting height, max	830 mm
Lifting capacity	360 kg
Internal dimensions	1600 x 896 mm



LP5+

With its lightweight design, LP5+ is easy to integrate into different environments – both public and private. LP5+ has a high transparent railing and lifts up to 830 mm. It can be supplied with a safety gate for upper levels, a side exit on the left/right side and wireless operation.

LP5+ specifications

Lifting height, max	830 mm
Lifting capacity	360 kg
Internal dimensions	1600 x 896 mm





LP7 & LP7+

The Stepless LP7 platform lift has a unique, self-supporting construction. It has a very low entry level of only 50 mm, which allows for a short ramp and no need for placing the platform in a pit.

The platform lift is available in two variants with different lifting heights; LP7 up to 800 mm and LP7+ up to 1500 mm. LP7 can be supplied either with a ramp safety device or with a fully automatic safety gate at the lower/upper level. The platform comes standard with an electronic drive unit.

LP7 & LP7+ specifications

Lifting height, max	800/1500 mm
Lifting capacity	350 kg
Internal dimensions	1600 x 900 mm





LP50

The Stepless LP50 is an indoor platform lift designed for recessing into the floor so that users can negotiate minor height differences of up to 830 mm.

When the LP50 is activated, the platform safety edges rise up automatically, preventing the user from rolling off the edge. When the user reaches the top level, the raised front edge lowers automatically, allowing him/her to exit the platform smoothly.

The LP50 platform lift is ideal for use in heritage buildings and other places that require an aesthetically pleasing solution as the platform lift is prepared for finishing with a variety of 22 mm-thick surfaces, such as wood, tiles and carpet.

LP50 specifications

Lifting height, max	830 mm
Lifting capacity up to	375 kg
Internal dimensions	1450 x 1090 mm





LP50H

The Stepless LP50H is an indoor, floor-mounted, vertical lifting platform with horizontal travel, which means that it actually moves in over the stairs to be negotiated, without requiring modifications to the stairs or the room. It can handle lifts to heights of up to 830 mm and travel up to 900 mm horizontally.


The platform lift is intended for recessing into the floor in front of the stairs that users need to negotiate. When the LP50H is activated, the platform safety edges rise up automatically, preventing the user from rolling off the edge.

When the user reaches the top level, the raised front edge lowers automatically, allowing him/her to exit the platform smoothly.

The LP50H becomes a natural part of the building, making it ideal for use in heritage buildings and other places that require an aesthetically pleasing solution. To help adapt the LP50H to suit different settings, this platform lift is prepared for finishing with a variety of 22 mm-thick surfaces, such as wood, tiles and carpet.

LP50H specifications

Lifting height, max	830 mm
Lifting capacity up to	375 kg
Internal dimensions	1450 x 1090 mm

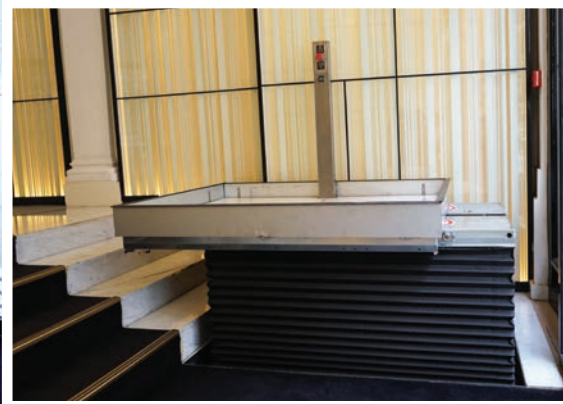



LP8

LP8 is used in places where level differences of up to 3 m need to be negotiated. LP8 enables the majority of users to be self-reliant. Easy accessible operating buttons are located on the platform and control panels for both upper and lower levels are supplied. The gates open and close automatically. The LP8 is delivered standard with gates and sides in glass and sides in glass.



LP8 specifications

Lifting height, max	3 m
Lifting capacity	352 kg
Internal dimensions	1524 x 923 mm

Solutions for public transport ranges from simple ramps and mobile platform lifts to specially designed products. Selecting a solution depends first and foremost on the height difference, but also on the individual needs, wishes and requirements that apply when proper accessibility conditions must be established.

Public transport

Stepless has developed a range of different solutions for public transport, which are all intended to create better conditions for passengers in wheelchairs, as well as those of reduced mobility.

We can offer portable ramps, mobile platform lifts as well as special solutions.





Portable ramps

Our portable ramps can be used for public transport. The Lite and EasyFold-Pro ramps are particularly suitable for use on public transport. They are typically used as loose ramps or stored in a cupboard located either on the train or the platform. We can design and produce the cupboards, ensuring that they are suitable for the surroundings and requirements.

Specifications – loose ramps

Interior width from	760 - 800 mm
Length	variable
Load up to	350 kg



Fixed ramp for trains

Stepless has specially designed and produced a ramp solution so that wheelchair users can get in and out of trains. It only takes 10 seconds for the train staff to operate the ramp and make it ready for use.

The ramp is folded along its width and placed in the cabinet by the door. The ramp distinguishes itself by being fitted with a mechanical arm which ensures fast and secure unfolding of the ramp, without train personnel having to perform heavy lifting.

Specifications – fixed ramps

Interior width	800 mm
Length	1337 mm
Load	300 kg



Platform lift LP11

The LP11 is a mobile platform lift specially designed to lift wheelchair users in and out of trains. Thanks to its design and light construction the LP11 is easy to move and position. The platform lift is quick and easy to operate and only needs to be operated by one person.

Flexible fit for all trains

The LP11 is standard-equipped with a width-adjustable ramp. The ramp can be adjusted 630-800 mm width-wise so that it can be adjusted to different train door widths.

LP11 specifications

Lifting height, max	955 mm
Lifting capacity	300 kg
Internal dimensions	1400 x 850 (811) mm

Access for all

We provide accessibility solutions for many different types of buildings



Heritage Buildings



Public Buildings



Private Homes



Public Transport



GB

Stepless
by *Guldmann*

V. Guldmann A/S
Tlf. +45 8741 3100
E-mail info@guldmann.com
www.stepless.com